

TOWER®

T12013

Safety and Instruction Manual

PLEASE READ CAREFULLY



800ml
Personal Blender

WHAT'S IN THE BOX

Instruction Manual

2 x Cup Lid

2 x Blending Cup

1 x Blending Motor Unit

1. Cup Lid
2. Blending Cup
3. Blending Motor Unit
4. Control Panel



BEFORE YOUR FIRST USE

1. Before using the unit for the first time, carefully clean the unit and all items that will come into contact with food.
2. Do not use any aggressive detergents, brushes with metal or nylon bristles or sharp objects such as knives or spatulas for cleaning the appliance and accessories, use a sponge or cloth dampened in warm water to avoid damage.
3. Dispose of packaging in a responsible manner.
4. It's a good idea to keep the outer box for storage purposes.

WARNING:
DO NOT immerse the unit in water.

CONTENTS:

Page

- 2 What's in the box & Before your first use
- 4 Product safety information
- 6 Using your appliance & functionality
- 7 Getting started
- 9 Care and cleaning
- 10 Warranty
- 11 Important! Wiring safety
- 12 Notes
- 15 Your receipt & disposal of the unit

PRODUCT SAFETY INFORMATION

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- Do not immerse cords, plugs or any part of the appliance in water or any other liquid.
- Do not leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- Do not pull the plug out by the cord as this may damage the plug and/or the cable.
- Do not use this product for anything other than its intended use.
- This appliance is for household use only.
- Do not carry the appliance by the power cord.
- Do not use the appliance outdoors.
- Switch off and unplug before fitting or removing tools/attachments, after use and before cleaning.

- Do Not run the blender for more than one minute at a time, as it can cause permanent damage to the motor.
- Avoid contact with moving parts. Keep hands and utensils out of blender jug while blending to prevent personal injury or damage to the blender.
- The blade is sharp. Handle with care.
- Never let the power unit, cord or plug get wet.
- To reduce the risk of injury, never place cutter-assembly blades on base without blender jug properly attached.
- Never exceed the maximum capacity.
- Do not attempt to bypass the interlock system that powers the unit on.
- Always operate on a flat surface.
- Unplug the blender when not in use, before taking off or putting on parts and before cleaning.
- To prevent product overheating, dry ingredients must not be processed for more than 30 seconds at a time.
- **WARNING:** Do not operate the motor continuously for more than 60 seconds at a time. Allow the motor to rest for 180 seconds before continuing.
- The Product is **NOT** suitable for blending soups or any other hot liquids.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the service department:
+44 (0) 844 984 0055

USING YOUR APPLIANCE

Functionality

To fill the jars prior to blender add harder/heavier foods to the required jar first with lighter foods on top and lastly any liquid required. The user should take care not to exceeded the max fill levels.

Screw on the blade assembly tight by hand ensuring the silicone seal around the base is seated correctly.

Connect the base unit to the mains electricity supply and power on.

Turn the jar upside down and align the 3 safety tabs on the jar with the 3 recesses in the bodywork.

With the safety tabs align press the jug down.

The Product is NOT suitable for blending soups or any other hot liquids.

Safety features

Built-in safety lock

The blender has a built-in safety lock feature. This ensures that you can only switch on the appliance while the cup and the blade sub-assembly are assembled on the motor base securely.

IMPORTANT: In the base of each blade's collar, there is a silicone gasket seal that creates an airtight fit with the jars. After dishwashing and before each use, always check to make sure the gasket is properly in place as the heat from some dishwashers may cause the gasket to become loose.

If the blade is not running smoothly, stop the appliance and add some liquid or reduce the amount in the cup.

GETTING STARTED

Pulse blending

To use the pulse function simply push down for 30 seconds and release until desired consistency has been achieved. After 2 x 30 second cycles we recommend that the user allows the product to cool for 3 minutes.

Continuous blending

For prolonged blending the jar can be twisted clockwise into its locked position, this will now blend until the jar has been released to its original unlocked position.

After blending is complete remove the jar from the base unit. Turn the jar back upright and remove blade assembly.

The user can now attach the storage lid and refrigerate or attach the drink spout lid for drinking on the go.

The appliance should be allowed to cool for 3 minutes after every 1 minute of continuous usage.

Troubleshooting

Motor doesn't start or attachment doesn't rotate.	Make sure jar tabs are sealed in the slots and turned clockwise.
Food is unevenly chopped.	Either you are chopping too much food at once, or not pulsing properly. Reduce the amount of food in the jar.
Food is too finely chopped or too watery	The food has been over-processed. Use short operating for best results.
You can not achieve crushed from ice cubes.	For best result, use ice straight from the freezer. Try using a shorter operating time.
Jar is leaking	Make sure that your lid or blade assembly is properly assembled. Leaking may occur if it is misaligned when twisted onto the jar.
Unit doesn't turn on	Make sure the unit is plugged in. Make sure the blade assembly is properly assembled to the jar and that it is not misaligned.
Unit doesn't turn off	Unplug the power cord from the electrical outlet and call customer service for support.
Doesn't mix well	Pulse ingredients for best results. Press down on the jar in short intervals for even blending and chopping. For frozen ingredients, pulse in short intervals of 2-5 seconds and repeat.
Lid/blade assembly does not properly align to the jar	Set the jar on a level surface. Place the lid or blade assembly on top of the jar and align the threads so that the lid/blades sit flat on the jar. Twist clockwise so that the lid/blades evenly align to the jar until you have a tight seal.

CARE AND CLEANING

Remove plug from the mains socket and allow the appliance to cool down before cleaning.

Do not immerse the base unit of the appliance in water and ensure no water enters the appliance.

Clean the base unit by wiping it with a damp cloth. A little detergent can be added needed.

Do not use scouring pads, steel wool, any form of strong solvents or abrasive cleaning agents to clean the appliance, they may damage the outside surfaces of the appliance.

Clean all accessories in warm soapy water Do not use any scouring pads, steel wool, any strong solvents or abrasive cleaning agents when cleaning accessories.

To clean the blades fill to the max fill level with warm soapy water. Connect the blade assembly as per directions and function for 30 seconds. Empty the waste water and rinse with fresh hot water. Repeat if necessary.

IMPORTANT!

After cleaning allow to dry fully before using again.

Do not use the appliance if damp. Ensure the appliance is completely clean and dry before storing.

Storage

To store your appliance:

1. Unplug power cord from the power outlet and clean as above.
2. Allow the appliance to dry fully.
3. Store on a flat, dry level surface out of reach of children.

TECHNICAL DATA

Description: 800ml Personal Blender
Model: T12013
Rated Voltage: 220-240V ~ 50Hz
Input power: 300W

DOCUMENTATION

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2004/108/EC	Electromagnetic Compatibility Directive.
2006/95/EC	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.
1935/2004/EC	Materials & Articles in Contact With Food (LFGB section 30 & 31).

RKW Quality Assurance, United Kingdom.

WARRANTY

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- RKW has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.

**An extended warranty is available for this appliance.
See back page for details.**


IMPORTANT! WIRING SAFETY

(For UK Use Only) As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue [N] Neutral

Brown [L] Live

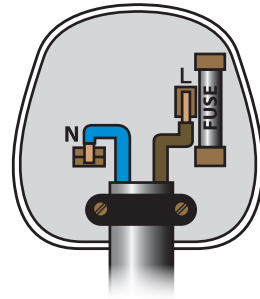

Plug Fitting Details (where applicable)

The wire coloured blue is the neutral and must be connected to the terminal marked [N] or coloured black. The wire coloured brown is the live wire and must be connected to the terminal marked [L] or coloured red. On no account must either the brown or the blue wire be connected to the [E] terminal \perp .

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved. If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:

This appliance is double insulated.
Do not connect any wire to the earth terminal.

NOTES

NOTES

NOTES

YOUR RECEIPT

Affix your store receipt to this page



DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



TOWER®

thank you!

We hope you enjoy your appliance for many years. As a thank you for purchasing one of our fantastic products, we are giving you an extra 2 years peace of mind.

***To receive your extra 2 years guarantee, register your appliance online by visiting:**

www.towerhousewares.co.uk

Should you have a problem with your appliance, or need any spare parts, please call our Service Department on:

+44 (0) 844 984 0055



great british design, innovation and excellence since 1912