

TOWER®

T16006

Safety and Instruction Manual

PLEASE READ CAREFULLY



5 Litre Digital Multi Cooker

TECHNICAL DATA

Description: Digital Multi Cooker
Model: T16006
Rated Voltage: 220-240V 50/60Hz
Power Consumption: 700 Watts

DOCUMENTATION

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2004/108/EC	Electromagnetic Compatibility Directive.
2006/95/EC	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.
1935/2004/EC	Materials & Articles in Contact With Food (LFGB section 30 & 31).

RKW Quality Assurance, United Kingdom.

WARRANTY

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- RKW has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.


**An extended warranty is available for this appliance.
See back page for details.**

IMPORTANT! WIRING SAFETY

(For UK Use Only) As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue [N] Neutral
Brown [L] Live
Green/Yellow [E] Earth ≡

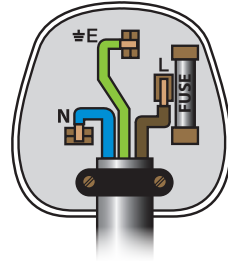

Plug Fitting Details (where applicable)

The wire coloured blue is the neutral and must be connected to the terminal marked [N] or coloured black. The wire coloured brown is the live wire and must be connected to the terminal marked [L] or coloured red. The wire coloured green/yellow must be connected to the terminal marked with the letter [E] or ≡. On no account must either the brown or the blue wire be connected to the [E] terminal ≡.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved. If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:
 This Appliance **MUST** be Earthed

PRODUCT SAFETY INFORMATION

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- Do not immerse cords, plugs or any part of the appliance in water or any other liquid.
- Do not leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- Do not pull the plug out by the cord as this may damage the plug and/or the cable.
- Do not use this product for anything other than its intended use.
- This appliance is for household use only.
- Do not carry the appliance by the power cord.
- Do not use the appliance outdoors.

- Never position the unit close to or on hot surfaces or open flames.
- Do not spill liquid onto the digital controls. If this happens switch off and unplug from the mains, mop up the liquid.
- High temperatures are present during operation. Only touch the handles on the unit.
- This appliance is Not intended for commercial use.
- Do not site the product under cupboards or near hanging fabric.
- Avoid contact with steam escaping from the lid vents.
- The cover can become extremely hot during operation therefore use oven gloves where possible when removing the cover to avoid burns.
- This product should not be used with timers or remote devices as to do so would be a potential fire hazard.
- DO NOT use an extension lead with this appliance.
- When normal operating pressure is reached, turn the heat down so all the liquid, which creates steam, does not vent out. In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the service department: **+44 (0) 844 984 0055**

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.



Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

WHAT'S IN THE BOX

Instruction Manual
Digital Multi Cooker

1. Cooking Pot
2. Glass Lid.
3. Control Panel.
4. Steam Pot.
5. Measuring Jug.
6. Rice Spoon



BEFORE YOUR FIRST USE:




1. Remove the parts from the packaging.
2. Wash and dry any parts that will come into contact with food.
3. Your appliance is now ready for normal use.

Dispose of the packaging in a responsible manner.

WARNING:
DO NOT immerse the unit in water.

USING YOUR APPLIANCE

Start/Cancel Button

1. Press MENU button to choose one program, then press START/CANCEL button.
2. The LCD will display , then chosen menu program will start to work.
3. After 5 seconds, the LCD will display the remaining cooking time, and then 5 seconds later will display , cycle will stay like this till cooking time finished.
4. After cooking has finished, the cooker will automatically enter the keep warm function
5. To stop cooking, press START/CANCEL button, the cooker will enter into standby mode. The menu program will not work in this mode. After one minute, the LCD will display . After five minutes, the LCD will power down, however the cooker will still have power.

Menu Button

1. Press MENU button.
2. The menu button light will switch on, and at the same time, the first menu program light will switch on.
3. Press the MENU button again to choose one program.
4. The LCD will show the set cooking time.
5. Press START/CANCEL button, your cooker will then start the selected program, indicated by the program light.

Temperature

1. Press the MENU button to choose one program.
2. If the chosen program allows for adjusting temperatures, then press TEMPERATURE button, the temperature function light will flash.
3. Press the TEMPERATURE button again to adjust the temperature, press one time to decrease the temperature by 5 degrees. A longer press will decrease the temperature by 10 degrees.
4. Once you have decreased the temperature to 40 degrees, press the TEMPERATURE button again to return the cooker to 170 degrees, then start to decrease to 40 degree if keep pressing TEMPERATURE
5. After adjusting, press START/CANCEL button and your cooker will start to work.

Time

1. Press the MENU button and choose a program.
2. Press TIME+ button, the time function light will flash. A short press will add 1 minute to the cooking time, a longer press will add 10 minutes.
3. After adjusting, press START/CANCEL button and your cooker will start to work.

Preset

1. To preset firstly choose one of the pre-selected functions ie:- Soup, Pilaf, Rice or Porridge by pressing the menu button repeatedly until you get to the required product.
2. Press preset button which will display a time, you can either press Time+ button to increase the time or Temp- to decrease the time. Then press the START/CANCEL button and the cooker will begin when preset time has expired

Keep Warm

1. All programs with the keep warm function will enter that mode once the main cooking time has elapsed.
2. Press the KEEP WARM button, the indicator light will flash and the time shows 2 hours.
3. Press the TIME+ button, the time indicator light will flash, then press TIME+ button or TEMPERATURE- button to set time. A short press, will add or subtract 10 minutes, a long press will add or subtract 1 hour. Your cooker will start the KEEP WARM mode after 5 seconds you can adjust the time from 10 minutes to 24 hours.

Troubleshooting

LED display shows E1 Connector broken circuit

LED display shows E2 Connector short circuit

LED display shows E3 Over heat - the beeper will sound ten times.

Press CANCEL button to cancel problem and to go into standby mode.

Program Guide

	Cooking time (Minutes)	Adjustable time (minutes)	Adjustable temperature (°c)	Preset	Auto Rotate	Auto Keep warm
Fry	35	5-99	40-170	no	no	yes
Stew	70	10-99	40-170	no	no	yes
Meat/ chicken	50	5-99	40-170	no	no	yes
Bean tendon	45	5-99	40-170	no	no	yes
Saute/ slow cook	70	5-990	40-170	no	no	yes
Roast	40	5-99	no	no	no	yes
Steam	30	5-99	no	no	no	yes
Soup	60	5-99	no	yes	no	yes
Risotto	50	5-99	no	yes	yes	yes
Porridge	45	5-99	no	yes	no	yes
Rice	45	5-99	no	yes	no	yes
Steam/ pasta	35	5-99	no	no	no	no
Reheat	9	no	no	no	no	yes

NOTES

NOTES

NOTE:

Ensure the product is disconnected from the mains and cool enough to handle before cleaning.

Fill the inner pot with warm water. Add a little detergent

Rinse and dry thoroughly

The outside of the product can be cleaned using a soft cloth moistened with a mild detergent solution.

Store your appliance after it has cooled down.

When not in use, store the appliance in a safe, dry place, out of reach of children.



TOWER®

T16006
**5 Litre
Digital Multi Cooker**

thank you!

We hope you enjoy your appliance for many years. As a thank you for purchasing one of our fantastic products, we are giving you an extra 2 years peace of mind.

***To receive your extra 2 years guarantee, register your appliance online by visiting:**

www.towerhousewares.co.uk

Should you have a problem with your appliance, or need any spare parts, please call our Service Department on:

+44 (0) 844 984 0055



great british design, innovation and excellence since 1912