

# TOWER®

T20002

## Safety and Instruction Manual

PLEASE READ CAREFULLY



## 2 Slice Toaster

## **TECHNICAL DATA**

**Description:** 2 Slice Toaster  
**Model:** T20002  
**Rated Voltage:** 220V-240V ~ 50Hz  
**Power Consumption:** 770-920 Watts

## **DOCUMENTATION**

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

<b>2004/108/EC</b>	Electromagnetic Compatibility Directive.
<b>2006/95/EC</b>	Low Voltage Directive.
<b>2011/65/EU</b>	Restriction of Hazardous Substances Directive.
<b>1935/2004/EC</b>	Materials & Articles in Contact With Food (LFGB section 30 & 31).

RKW Quality Assurance, United Kingdom.

## **WARRANTY**

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

### **The Following Conditions Apply:**

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- RKW has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.


**An extended warranty is available for this appliance.  
See back page for details.**

## IMPORTANT! WIRING SAFETY

**(For UK Use Only)** As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

**Blue** [N] Neutral  
**Brown** [L] Live  
**Green/Yellow** [E] Earth ≡

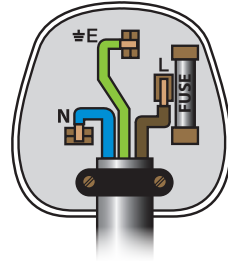

### Plug Fitting Details (where applicable)

The wire coloured blue is the neutral and must be connected to the terminal marked [N] or coloured black. The wire coloured brown is the live wire and must be connected to the terminal marked [L] or coloured red. The wire coloured green/yellow must be connected to the terminal marked with the letter [E] or ≡. On no account must either the brown or the blue wire be connected to the [E] terminal ≡.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved. If in doubt consult a qualified electrician who will be pleased to do this for you.

### Non-rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**WARNING:**  
 This Appliance **MUST** be Earthed

## PRODUCT SAFETY INFORMATION

---

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- Do not immerse cords, plugs or any part of the appliance in water or any other liquid.
- Do not leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- Do not pull the plug out by the cord as this may damage the plug and/or the cable.
- Do not use this product for anything other than its intended use.
- This appliance is for household use only.
- Do not carry the appliance by the power cord.
- Do not use the appliance outdoors.
- Prior to first use, the toaster should be used for a few minutes without bread in it. There will be some smoke at first, this is entirely normal.
- Do not touch the hot surface. Use handles or knobs.
- Use only pre-sliced bread.

- Do not insert oversized foods, metal foil packages, or metal utensils into the toaster. This may result in electric shock.
- Do not use the toaster near curtains, upholstery or other decorative fabrics, as they can easily catch fire and cause a safety hazard.
- Do not remove food from the toaster while the push lever is down.
- Do not remove the crumb tray while the toaster is plugged in. Disconnect from power supply, wait for it to cool, then remove the crumb tray.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Do Not use a separate timer or separate remote device.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the service department:  
**+44 (0) 844 984 0055**

## DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.



Please visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items.

Please visit [www.weeeireland.ie](http://www.weeeireland.ie) for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

## WHAT'S IN THE BOX

Instruction Manual

1. Toaster Slots with centring guides
2. Loading Lever
3. Browning Control
4. Defrost Button
5. Reheat Button
6. Cancel button
7. Removable Crumb Tray



## BEFORE YOUR FIRST USE:

1. Remove all packaging materials including those that may be inside the toasting slots or toasting lever slots.
2. Wipe the exterior with a damp cloth. Dry thoroughly. Do not use abrasive cleaners.
3. Do not put the Toaster, cord or plug in water.
4. Be sure crumb tray is pushed all the way into the back of the toaster and the toasting levers are in the UP position.
5. Unwrap power cord from cord storage area on underside of toaster and plug into a 220-240V AC outlet.
6. Turn the browning selector knob to, the lightest setting.
7. Lower the toasting lever until they lock in place. Operate without bread once or twice to burn off any manufacturing residue. You may notice a light amount of smoke; this is normal and will stop as the heating elements continue to heat.

**WARNING:**  
DO NOT immerse the unit in water.

## **USING YOUR APPLIANCE:**

---

### **Automatic centring guides**

Lowering the toasting lever closes the centring guides and holds the bread or toaster food centrally in the toasting slots.

Note: The toasting lever will not lock down unless the toaster is plugged into an electrical outlet.

### **Toasting Instructions**

1. Make sure crumb trays are pushed all the way into the back of the Toaster and the toasting levers are in the UP position.
2. Make sure no bread or other objects are inside the toasting slots. Place Toaster on a flat, level, heat resistant surface.
3. Plug the power cord into a 220-240AC electrical outlet.
4. Position the browning selector knob to desired setting(s). To test toasting times for browning, it is best to use both toasting slots' position the browning selector knob between (3) and (4) medium; then adjust each subsequent toasting to your preference.
5. Remove all protective wrappings from food before placing into the toasting slot(s).
6. Insert bread or toaster food into the toasting slot(s). Lower the toasting lever until locked into place. The automatic centring guides hold food upright for uniform side-to-side toasting. When the bread is lowered into position, toasting will begin.

**NOTE:** The toasting lever will not lock into position unless the Toaster is plugged into a 220-240V AC electrical outlet. When toasting a single slice, the bread may be placed in any toasting slot.

To prevent a fire hazard, never place bread over the opening of the Toaster, always place bread into the slots.

**DO NOT** change the browning selector knob selection during the toasting cycle. First press the **CANCEL** button; then turn the browning selector knob to adjust the browning level. Lower the toasting lever and toast until the desired toast colour is achieved.

7. When the toast reaches the selected browning level, it will pop up automatically.
8. Remove bread from toasting slot(s). Use care when removing bread as the bread and the top of the toaster will still be hot.
9. If your toast jams, unplug the cord and move the loading lever up and down a few times to raise jammed bread.
10. To interrupt toasting, press the corresponding **CANCEL** button.
11. Unplug cord from wall outlet when not in use.

**IMPORTANT: Never use a fork or sharp-edged utensil to remove toast, because that may damage the heating element or cause injury.**





T20002 2 Slice Toaster

**NOTE:**

Do not immerse any part of the toaster in water or any other liquid.

Clean the toaster regularly. This appliance contains no user serviceable parts and requires little maintenance. Leave any servicing or repair to qualified personnel. Be sure to empty and clean the crumb tray regularly.

Unplug the toaster and allow it to cool completely before cleaning.

To clean, wipe the exterior with a slightly dampened soft cloth or sponge and dry with a cloth or paper towel. Do not use strong cleaners or abrasives that may scratch surface, and never spray cleaners directly onto the toaster.



# TOWER®

T20002  
**2 Slice  
Toaster**

*thank you!*

We hope you enjoy your appliance for many years. As a thank you for purchasing one of our fantastic products, we are giving you an extra 2 years peace of mind.

**\*To receive your extra 2 years guarantee, register your appliance online by visiting:**

**[www.towerhousewares.co.uk](http://www.towerhousewares.co.uk)**

Should you have a problem with your appliance, or need any spare parts, please call our Service Department on:

**+44 (0) 844 984 0055**



*great british design, innovation and excellence since 1912*

Designed, developed and distributed throughout the UK by RKW LTD.